

LIFTED APPLICATIONS

"GET SOME AIR" HAS A NEW MEANING



6" ≠ 6"
LIFT SPACER

Spacers for your lifted applications

Lift spacers can be used with most Ride-Rite™ air spring kits, but not with Coil-Rite™ kits. The lift spacer needs to match the amount of lift added to the rear of your vehicle. Note that a six-inch lift does not mean you need a six-inch lift spacer!

Most six-inch lifts only have four inches of lift in the rear to level out the truck. This holds true for the shorter lift kits as well. If you are unsure about the spacer needed for your application, visit riderite.com/contact-us for support.

1

Look up your
vehicle

firestoneip.com/kit-search



2


Download install
manual and check
lower bracket
mounting location
(axle vs leaf)



3

Take the
measurement
accordingly on
your vehicle

Measure while truck has all four
wheels on on a flat surface

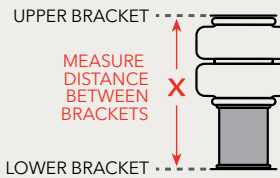

4

Find the spacer in
the table below



LIFT SPACERS*

	DISTANCE BETWEEN BRACKETS	LIFT SPACER HEIGHT	AXLE MOUNT NUMBER**	LEAF MOUNT NUMBER**
	6.5" - 7.5"	1.25"	2536	2536
	7.5" - 8.5"	2"	2366	2366
	8.5" - 9.5"	3"	2368	2367
	9.5" - 10.5"	4"	2371	2370
	10.5" - 11.5"	5"	2373	2370
	11.5" - 12.5"	6"	2375	2374

* May void Firestone warranty if incorrectly installed or wrong spacer is selected.

** Packages of 2.